

## Contents

<b>Panel descriptions</b> .....	<b>2</b>	<b>Adding more tones to the XPS-60 (EXPANSION)</b> .....	<b>14</b>
Top panel .....	2	Installing a World Expansion .....	14
Basic operation .....	4	Selecting tones you've added .....	14
Rear panel (connecting your equipment).....	5	Uninstalling a World Expansion .....	14
<b>Overview</b> .....	<b>6</b>	<b>Importing and playing samples</b> .....	<b>15</b>
Basic structure of the XPS-60.....	6	Importing audio files (samples) .....	15
Recalling a sample .....	15	<b>Operating the menu</b> .....	<b>16</b>
<b>Playing</b> .....	<b>7</b>	Changing the auto off setting .....	16
Turning the power on/off .....	7	Formatting a USB flash drive (FORMAT USB MEMORY).....	16
Selecting a scene .....	7	Import/export .....	17
Changing the playing feel of the keyboard (KEY TOUCH).....	8	Importing tones .....	17
Raising/lowering the keyboard pitch in semitones (TRANPOSE) .....	8	Importing scenes .....	17
Changing the key range in octaves (OCTAVE) .....	9	Exporting tones.....	18
Using the SOUND MODIFY knobs to alter the sound.....	9	Exporting scenes.....	18
Playing arpeggios (ARPEGGIO) .....	9	Returning to the factory settings (FACTORY RESET) .....	19
Playing chords (CHORD MEMORY).....	10	INFORMATION.....	19
Playing the drum sounds (DRUMS) .....	10	<b>Troubleshooting</b> .....	<b>20</b>
<b>Playing back the step sequencer</b> .....	<b>11</b>	<b>USING THE UNIT SAFELY</b> .....	<b>21</b>
Playing back the step sequencer .....	11	<b>IMPORTANT NOTES</b> .....	<b>22</b>
Step sequencer: basic operations.....	11	<b>Main specifications</b> .....	<b>24</b>
<b>Playing back the rhythm patterns</b> .....	<b>12</b>		
Selecting and playing back a rhythm pattern .....	12		
Changing the tempo .....	12		
<b>Playing back audio files (audio player)</b> .....	<b>13</b>		
Assigning audio files to pads for playback.....	13		

### Startup Guide (this document)

Read this first. It explains the basic things you need to know in order to use the XPS-60.

### PDF manual (download from Roland website)

- **Reference Manual**  
This explains how to operate all the functions and parameters of this instrument.
- **Parameter Guide**  
This explains about the parameters of the unit.
- **Sound List**  
This is a list of the sounds built into the unit.
- **Roland Cloud User's Guide**  
This explains how to use tone files from Roland Cloud with this instrument.
- **MIDI Implementation**  
This is detailed information about MIDI messages.

#### To obtain the PDF manual


1. Visit the following website on your computer.  
<https://www.roland.com/manuals/>
2. Choose "XPS-60" as the product name.



Before using this unit, carefully read "USING THE UNIT SAFELY" and "IMPORTANT NOTES" (the leaflet "USING THE UNIT SAFELY" and the Startup Guide (p. 21, p. 22)). After reading, keep the document(s) where it will be available for immediate reference.

# Panel descriptions

## Top panel

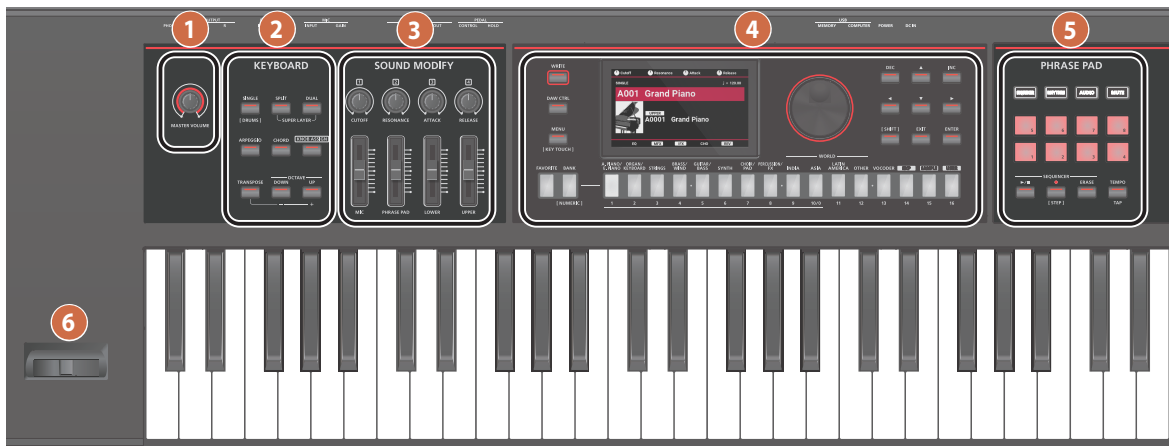

1

### **[MASTER VOLUME] knob**

Adjusts the volume that is output from the OUTPUT and PHONES jacks.

2 **KEYBOARD**

### **[SINGLE] (DRUMS) button**

Turns the single function on/off.

Turn this button on (the button lights up) while holding down [SHIFT] to play the drum kit by using the keyboard (p. 10).

### **[SPLIT] button**

Turns the split function on/off.

\* Hold down the [SPLIT] and [DUAL] buttons at the same time to switch the Super Layer function on/off.

### **[DUAL] button**

Turns the dual function on/off.

\* Hold down the [SPLIT] and [DUAL] buttons at the same time to switch the Super Layer function on/off.

### **[ARPEGGIO] button**

Turns the arpeggiator on/off (p. 9).

Press this button while holding down the [SHIFT] button to make the arpeggio hold.

### **[CHORD] button**

Turns the chord memory function on/off (p. 10).

### **[KNOB ASSIGN] button**

When this button is pressed, you can control the functions that are assigned to the SOUND MODIFY [1]–[4] knobs (p. 9).

### **[TRANSPOSE] button**

Turns the transpose (key shift) feature on/off (p. 8).

Press the OCTAVE [DOWN] or [UP] button while holding down this button to raise or lower the keyboard's pitch range in semitones.

### **OCTAVE [DOWN] [UP] buttons**

Raises or lowers the key range in steps of an octave (p. 9).

3 **SOUND MODIFY**

### **[1]–[4] knobs**

(CUTOFF, RESONANCE, ATTACK, RELEASE)

These give you control over the CUTOFF, RESONANCE, ATTACK and RELEASE parameters. Press the [KNOB ASSIGN] button to the left of these knobs to control the parameters that are assigned to the [1]–[4] knobs (p. 9).

### **[MIC] slider**

Adjusts the volume of the mic connected to the MIC INPUT connector.

### **[PHRASE PAD] slider**

Adjusts the volume of the step sequencer, rhythm pattern and audio player.

### **[LOWER] slider**

Adjusts the volume of the lower part (part 2).

### **[UPPER] slider**

Adjusts the volume of the upper part (part 1).

4

### **[WRITE] button**

Use this button to save the settings you've edited.

### **[DAW CTRL] button**

Press to use this instrument as a controller for your DAW.

For details, refer to the "Reference Manual" (Roland website).

### **[MENU] (KEY TOUCH) button**

Shows the menu screen (p. 16).

If you press another button or turn a knob while holding down this button, the related settings screen is shown (p. 4).

Press this button while holding down the [SHIFT] button to display the KEY TOUCH screen (p. 8).

### **Display**

Shows various information depending on the operation.

### **Value dial**

Changes the values. When you hold down the [SHIFT] button and turn the dial, the value changes more greatly.

**[FAVORITE] button**

Turns the favorite function on/off.

**[BANK] (NUMERIC) button**

When this button is on (lit), you can use the [1]–[16] buttons to select a favorite bank.

Press this button while holding down the [SHIFT] button to select numeric mode.

In numeric mode, you can use the [1]–[10] buttons to select a tone.

**[A.PIANO/E.PIANO]–[USER] (category) buttons**

([1]–[16] buttons)

Selects a tone (including scenes, tones and drum kits) category (type) (p. 7). Turn the value dial to select a different tone in the same category.

**[DEC] [INC] buttons**

Changes a value. If you press one of these buttons while holding down the other, the value changes more rapidly. If you press one of these buttons while holding down the [SHIFT] button, the value changes more greatly.

**[▲] [▼] [◀] [▶] buttons**

Move the cursor position up/down/left/right. Hold down the buttons to move the cursor continuously. If you hold down the button for one direction and then press the other button, the cursor moves more quickly.

**[SHIFT] button**

Use this button together with other buttons to switch between functions.

**[EXIT] button**

Exits the current screen or cancels an operation.

**[ENTER] button**

Used for confirming a value or executing an operation.

**5 PHRASE PAD****[SEQUENCER] button**

Press this to use the step sequencer (p. 11).

**[RHYTHM] button**

Press this to use the rhythm patterns (p. 12).

**[AUDIO] button**

Press this to play back audio files that are stored on a USB flash drive (p. 13).

**[MUTE] button**

Sets whether the applicable part plays or not when you play the keyboard.

When you're using the step sequencer, this mutes the specified track (p. 11).

**Pads [1]–[8]**

These play back the phrases (rhythm patterns/audio files) assigned to the pads. When the [SEQUENCER] button is on (lit), these pads select the tracks.

**[▶/■] button**

Plays/stops the step sequencer (p. 11).

**[●] (STEP) button**

Press this to record to the step sequencer (p. 11).

If you press this button while holding down the [SHIFT] button, the instrument switches to STEP REC/TR-REC mode.

**[ERASE] button**

Erases some or all of a track you've recorded with the step sequencer.

**[TEMPO] (TAP) button**


Press this to show the TEMPO screen (p. 12).

You can set the tempo by repeatedly pressing the button at the desired interval (tap tempo).

**6****Pitch bend/modulation lever**

This lets you control the pitch or apply vibrato.

## Basic operation

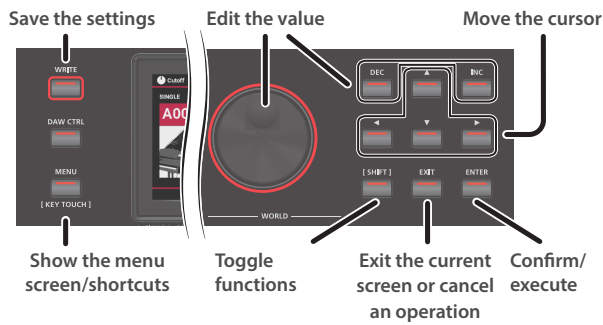

## Operating procedures in this manual

On this instrument, there are multiple ways to perform operations like moving the cursor, editing a value, confirming/canceling, switching screens and so on by using the buttons, the dial and so forth.

To avoid making the subsequent explanations in this manual unnecessarily complex, we will not always describe all of these methods, but may simply provide an abbreviated explanation such as “move the cursor to \* and edit the value”. In actual operation, you may use any of the above methods as is convenient for you.

### Move the cursor

When selecting items onscreen or editing the parameter settings, use the [▲] [▼] [◀] [▶] buttons to move the cursor to the desired parameter.

- Hold down the buttons to move the cursor continuously.
- If you hold down the button for one direction and then press the other button, the cursor moves more quickly.

### Edit the value

Use the value dial or the [DEC] [INC] buttons to edit the value highlighted by the cursor.

- Hold down the [SHIFT] button while using these controls to change the value in larger increments.
- If you press either the [DEC] or [INC] button while holding down the other button, the value changes more rapidly.

### [ENTER] button

Press to confirm a value or execute an operation.

### [EXIT] button

Press to exit a screen or cancel an operation.

### [MENU] button

Displays the menu screen. Use this when editing the detailed settings of the tones and so on, and for the system settings and utilities.

### Save the settings

When you press the [WRITE] button, the WRITE menu screen is shown from which you can save the system settings, as well as the scenes, tones and drum kit.

For details, refer to the “Reference Manual” (Roland website).

### NOTE


Never turn off the power or remove the USB flash drives while the screen indicates “Now Writing...”.

### Shortcuts

By holding down the [MENU] button and operating another button or knob, you can switch to the related settings screen for the button that you pressed. For details, refer to the “Reference Manual” (Roland website).

## Rear panel (connecting your equipment)

\* To prevent malfunction and equipment failure, always turn down the volume, and turn off all the units before making any connections.

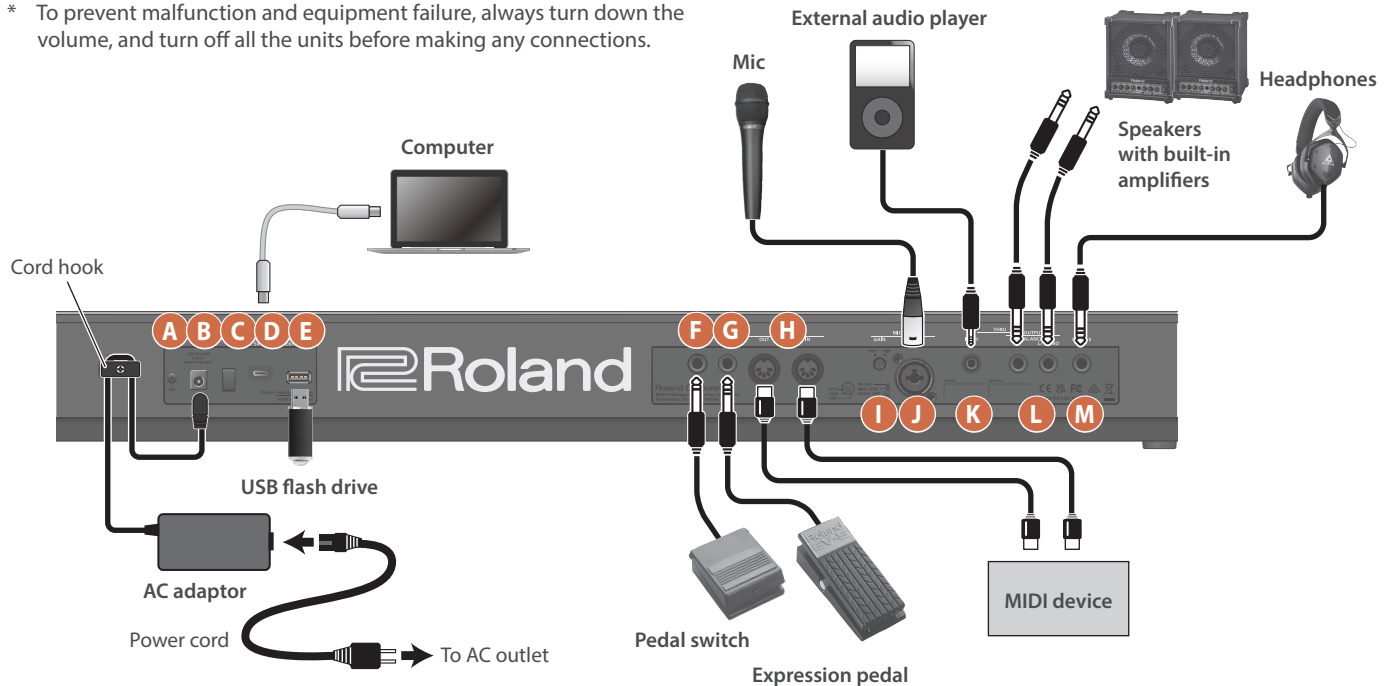

### A Ground terminal

Connect this to an external earth or ground if necessary.

### B DC IN jack

Connect the included AC adaptor to this jack.

\* Use the cord hook to secure the cord of the AC adaptor as shown in the illustration.

### C [POWER] switch

This switches the power on and off (p. 7).

### D USB COMPUTER port

Connect this to a computer or mobile device.

\* A commercially available USB AC adaptor (5 V  $\overline{\text{DC}}$  / 2 A or greater) is required to supply power to the USB COMPUTER port. Depending on the manufacturer and type of the USB AC adaptor, correct operation may not be possible.

\* Do not use a USB cable that is designed only for charging a device. Charge-only cables cannot transmit data.

### E USB MEMORY/EXT DEVICE port

Connect a commercially available USB flash drive or external USB device here.

This is used to play audio files, add World Expansion tones and back up data (p. 13, p. 14).

### F PEDAL HOLD jack

If you connect a pedal switch (DP series, sold separately) to this jack, you can use it as a hold pedal. You can also assign various functions to the pedals that are connected, and control them.

### G PEDAL CONTROL jack

If you connect an expression pedal (EV-5, sold separately) or pedal switch (DP series, sold separately) to this jack, you can use them to control various functions.

\* Use only the specified expression pedal. By connecting any other expression pedals, you risk causing malfunction and/or damage to the unit.

### H MIDI IN, OUT connectors

You can connect a MIDI device to this connector.

### I MIC [GAIN] knob

Adjusts the input gain of the MIC INPUT jack.

### J MIC INPUT jack

Connect a dynamic mic here.

\* A condenser microphone (phantom powered) cannot be used.

Pin assignment of MIC INPUT jack



### K EXT INPUT jack

Connect this to your external audio player or similar device.

### L OUTPUT R, L/MONO jacks (balanced)

These are balanced output connectors for audio signals.

Connect these to an amplifier or mixer. For mono output, connect to the L/MONO jack.

Pin assignment of OUTPUT R, L/MONO jacks



### M PHONES jack

Used for connecting headphones (sold separately).

# Overview

## Basic structure of the XPS-60

### Controllers

These components send performance data to the sound generator, such as when you press/release keys, press the hold pedal and so on.

The controllers include the keyboard, the buttons and knobs on the panel, the pitch bend and modulation lever, the pedals connected to the rear panel and so on.

### Sound generator section

This section generates and modifies the sound. The sound generator receives performance data from the controllers and uses this to play the tones and scenes.

### Effects

MFX/IFX	Features 93 types of effects including distortion, flanger effects and so forth.
Chorus/reverb	This chorus/reverb are available as separate effects from the chorus/reverb of the MFX. The chorus can also be used as a delay.
EQ	Adjusts the level of the different frequency bands of the sound.

- \* For the MFX, you can store the tone effect and part effect separately, and switch between settings you want to use.
- \* Chorus/Delay and Reverb are stored separately for the scene effect and for the system effects, and you can switch between settings you want to use.

### Phrase pad

Plays back the phrases assigned to pads [1]–[8].

Step sequencer	Selects the track to record.
Rhythm pattern	Plays/stops patterns that are specially designed for rhythms.
Audio player	Plays/stops audio files that are stored on a USB flash drive.

### Scenes

The scenes contain tones and drum kits assigned to eight parts. You can play up to eight tones at the same time.

You can also save the states below in the settings for the scenes.

SINGLE	Plays only one tone.
SPLIT	Uses different tones for the left and right hands.
DUAL	Layers two different tones.
SUPER LAYER	Layers a single tone on itself for a fatter sound.
DRUMS	Uses only the drum kits.



The tones for parts 1 and 2 are used when the instrument is in split or dual mode.

### Tones

These are sounds used for playing. Each tone consists of up to four partials, and you can combine the partials to create a wide variety of sounds. A tone consists of the combination of sound generator and effects.

### Drum kit

The drum kit is a collection of percussion instruments and sound effects. Each key (note number) plays a different percussion instrument or sound effect.

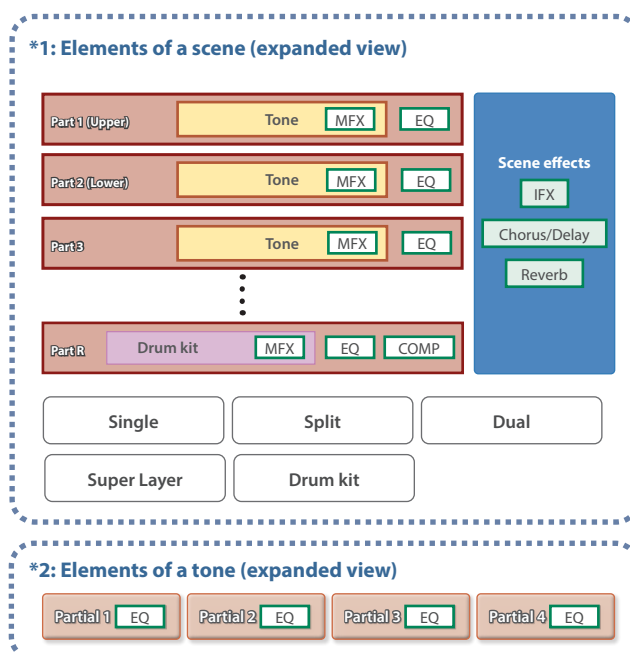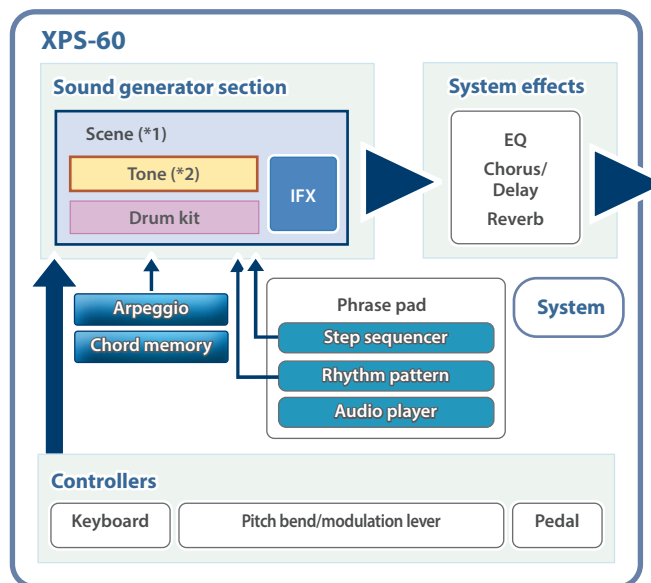

# Playing

## Turning the power on/off

- \* Before turning the unit on/off, always be sure to turn the volume down. Even with the volume turned down, you might hear some sound when switching the unit on/off. However, this is normal and does not indicate a malfunction.

### Turning the power on

#### 1. Turn on this instrument first, and then any connected devices.

A screen like the one shown below (the top screen) appears.



- \* The power to this unit turns off automatically to save energy after a certain amount of time (20 minutes by default) has passed since it was last used or since its buttons or controls were operated.
- \* If the AUTO OFF function is set to "OFF", this screen does not appear.

#### 2. Press the [ENTER] button to close the popup window.

- \* If you don't want to show this screen again, move the cursor to "Don't show again", use the [INC] and [DEC] buttons to select the check box and then close the popup window.

#### 3. Turn the [MASTER VOLUME] knob to adjust the volume.

### Turning the power off

#### 1. Turn off any connected devices first, and then turn off this instrument.

#### Concerning the Auto Off function

The power to this unit turns off automatically to save energy after a certain amount of time (20 minutes by default) has passed since it was last used or since its buttons or controls were operated.

##### NOTE


- If the power automatically turns off, any unsaved data is lost. Before the power turns off, save the data that you want to keep.
- If you don't want the unit to turn off automatically, turn this setting off (p. 16). Note that when the setting is turned off, the unit may consume more power.
- You can simply turn the power back on after it has turned off automatically.

## Selecting a scene

#### 1. Move the cursor to the scene.

- \* When you select a scene that's set for single, split, dual or Super Layer mode, the corresponding screen appears.

Below is a screen example of a scene with single settings.

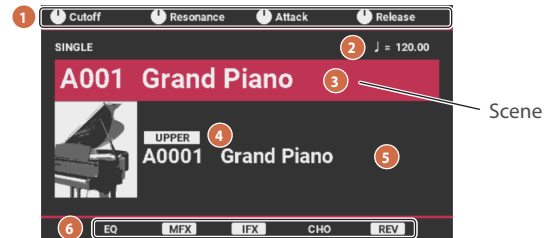

No.	Explanation	No.	Explanation
1	Parameters that can be adjusted now using the SOUND MODIFY knobs	4	UPPER tone (UPPER)/ LOWER tone (LOWER)
2	Tempo	5	Tone
3	Scene	6	Effect on/off (lit for on, dark for off)

#### 2. Press a category button ([A.PIANO/E.PIANO]-[USER]) to select a category.

Category	Explanation	
A.PIANO/E.PIANO	Acoustic piano, electric piano	
ORGAN/KEYBOARD	Organ, keyboard	
STRINGS	Strings	
BRASS/WIND	Brass and wind instruments	
GUITAR/BASS	Guitar, bass	
SYNTH	Synthesizers	
CHOIR/PAD	Choir, synth pad	
PERCUSSION/FX	Percussion, sound effects	
WORLD	Folk instruments and sounds specific to certain regions	
	INDIA	India
	ASIA	Asia
	LATIN AMERICA	Latin America
	OTHER	Middle East, Africa and other regions
VOCODER	Vocoder * Connect a mic to the MIC INPUT connector for vocoder effects.	
EXP	World Expansion or other expansion tone	
SAMPLE	Sample phrases	
USER	User scenes	

#### 3. Use the value dial to select a scene.

**MEMO**

- You can also press the [ENTER] button to select from the list screen. When you press the [ENTER] button on the SCENE LIST screen, you can switch between scene category list view (by category) and scene bank list view (by bank).
- When you select a scene that's set for single, split, dual or Super Layer mode, the corresponding button lights up.
- \* When you edit the settings for the scenes, tones or drum kit, an asterisk appears next to the name. Use the write operation if you want to save the edited settings. For details, refer to the "Reference Manual" (Roland website). The asterisk disappears after you've saved the settings.


## Changing the playing feel of the keyboard (KEY TOUCH)

Here's how to adjust the playing feel (key touch) of the keyboard.

### Adjusting the keyboard feel

1. Hold down the [SHIFT] button and press the [MENU] button.

The KEY TOUCH screen appears.

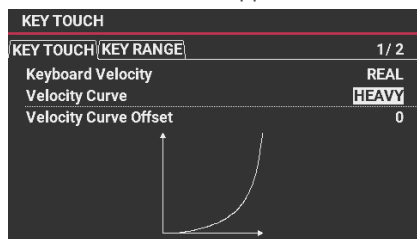

2. Move the cursor to "Velocity Curve", and use the value dial to change the setting.

Value	Explanation
LIGHT	Sets the keyboard feel to respond with a lighter touch. With this setting, you can achieve fortissimo (ff) levels by playing with a lighter touch than the "MEDIUM" setting, so the keyboard action feels lighter. This makes the keyboard easier to play for players who have less strength in their hands.
MEDIUM	Sets the keyboard feel to respond with a standard touch.
HEAVY	Sets the keyboard feel to respond with a heavier touch. With this setting, the keys must be played with more force than the "MEDIUM" setting to achieve fortissimo (ff) levels, so the keyboard action feels heavier. This lets you play dynamic passages with greater emotion.

**MEMO**



You can also adjust the key touch in greater detail, or make the keys play at a constant volume regardless of how hard you play them. For details, refer to the "Parameter Guide" (Roland website).

### Adjusting the key range for each part (KEY RANGE)

1. Hold down the [SHIFT] button and press the [MENU] button.

The KEY TOUCH screen appears.

2. On the "KEY RANGE" tab page, move the cursor to the lower or upper limit of the part for which you want to adjust the key range, and use the value dial to change the setting.

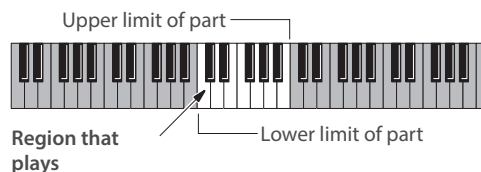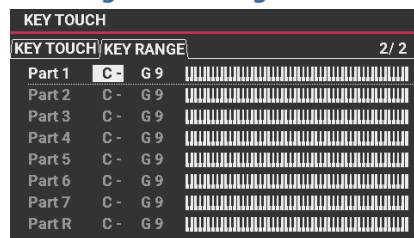

Value	Explanation
C- -G9	Sets the key range for each part. Make these settings when you want different key ranges to play different tones. Specify the lower and upper limits for the ranges to set. * If you try to raise the lower limit of the playing range beyond the upper limit, or lower the upper limit beyond the lower limit, the other setting changes to the same value.

**MEMO**

You can also set the key range by holding down the [SHIFT] button and pressing the lower or upper key on the "KEY RANGE" tab page of the KEY TOUCH screen.

## Raising/lowering the keyboard pitch in semitones (TRANPOSE)


You can transpose the keyboard in semitone steps.

For instance, if you wanted to play a song in the key of C that was written in the key of E, set the keyboard transpose value to "+4".

1. Hold down the [TRANPOSE] button and press the [DOWN] button or [UP] button.

When this is set to a value other than "0", the [TRANPOSE] button lights up.

To return the value to zero, press the [DOWN] and [UP] buttons simultaneously while holding down the [TRANPOSE] button.

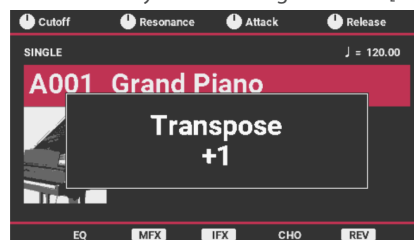

Value	-5 (G)-0 (C)+6 (F#)
-------	---------------------

## Changing the key range in octaves (OCTAVE)

This shows how to shift the pitch of the keyboard up or down in octaves.

### 1. Press the OCTAVE [DOWN] or [UP] button.

If the value is not "0", the OCTAVE [DOWN] or OCTAVE [UP] button light up.

Press the OCTAVE [DOWN] button and [UP] button simultaneously to return the value to "0".



Value -3-0-+3 octaves

## Using the SOUND MODIFY knobs to alter the sound

You can use the SOUND MODIFY [1]-[4] knobs to control the sound in real time.

The parameters you can control include CUTOFF, RESONANCE, ATTACK, RELEASE or the Knob1-4 Function parameters.

\* You may not notice a change in the sound, depending on the tone you're using.



Parameter	Explanation
CUTOFF	Sets the frequency from which the filter takes effect (the cutoff frequency).
RESONANCE	Emphasizes the sound in the region of the cutoff frequency, adding character to the tone.
ATTACK	Adjusts the time it takes for the sound reaches its maximum volume after you press the key.
RELEASE	Adjusts the time it takes for the volume to fall to zero after you take your finger off the key.
Knob 1-4 Function	You can assign various functions to the [1]-[4] knobs. Press the [KNOB ASSIGN] button to control the parameters that are assigned to the [1]-[4] knobs. Refer to the "Reference Manual" (Roland website) for how to assign functions to the [1]-[4] knobs.

## Playing arpeggios (ARPEGGIO)

An arpeggio is a method of playing the notes of a chord by separating and playing them individually. The arpeggiator is a feature that automatically plays an arpeggio based on the keys that you press.

### 1. Press the [ARPEGGIO] button to make it light.

### 2. Play a chord on the keyboard.

According to the notes of the chord you play, an arpeggio starts playing.


### 3. To turn off this function, press the [ARPEGGIO] button again to make it go dark.

## Selecting the arpeggio style

### 1. Hold down the [MENU] button and press the [ARPEGGIO] button.

The ARPEGGIO screen appears.

### 2. Press the [▶] button to select the PART tab.

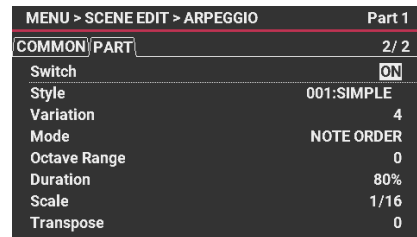

### 3. Move the cursor to "Style", and use the value dial to select a style.

Value 001-128

#### MEMO

- You can also do this from the [MENU] button → SCENE EDIT → ARPEGGIO.
- When "Hold Switch" is set to "ON" in the "COMMON" tab page, the arpeggio keeps playing even after you take your fingers off the keyboard.
- Press the [ARPEGGIO] button while holding down the [SHIFT] button to set Hold Switch to "ON".
- Refer to the "Parameter Guide" (Roland website) for more information on the parameters to configure in the ARPEGGIO screen.

## Playing chords (CHORD MEMORY)

Chord memory is a function that plays a chord based on pre-registered chord forms, when you play a single note on the keyboard.

1. Press the [CHORD] button to make it light.
2. Press a key.  
A chord plays according to the currently selected chord form.
3. To turn this off, press the [CHORD] button again to make it dark.

### Selecting a chord form

1. Hold down the [MENU] button and press the [CHORD] button.

The CHORD MEMORY screen appears.

MENU > SCENE EDIT > CHORD MEMORY	
COMMON/PART	1 / 2
Switch	OFF
Form	01:Pop 1
Key	C
Rolled Switch	OFF
Rolled Type	UP

2. Move the cursor to “Form” and use the value dial to select the chord form.

This changes how the chord plays.

#### MEMO


- You can also operate this from the [MENU] button → SCENE EDIT → CHORD MEMORY.
- For details on the parameters that are set from the CHORD MEMORY screen, refer to the “Parameter Guide” (Roland website).

## Playing the drum sounds (DRUMS)

You can use the keyboard to play the drum kit sounds.

1. Hold down the [SHIFT] button and press the [SINGLE] button.

The DRUMS screen appears.

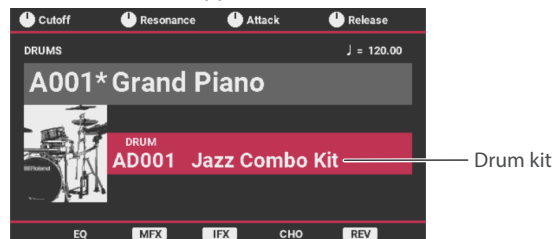

2. Press the [▼] button to move the cursor to the drum kit.
3. Press the [1], [2], or [16] button.
4. Use the value dial to select a drum kit.

#### MEMO

For a list of drum kits, refer to the “Sound List” (Roland website).

5. Press a key.


# Playing back the step sequencer

The step sequencer records and repeatedly plays back what you play on the keyboard, as well as your controller actions of the knobs, pitch bend/modulation lever, sliders (other than MIC) and the pedals as a pattern.

This data is recorded in and played back from tracks 1–R, which correspond to parts 1–R.

## MEMO

For details on how to record to the step sequencer, refer to the “Reference Manual” (Roland website).

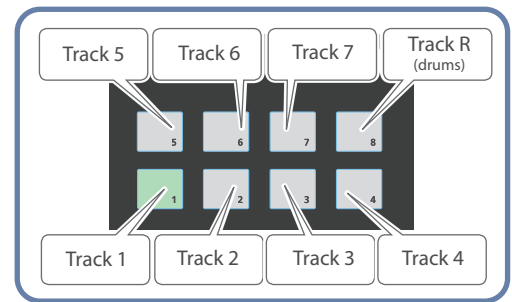


## Playing back the step sequencer

### Selecting a scene for playback

#### 1. Press the [SEQUENCER] button.

The SEQUENCER screen appears.

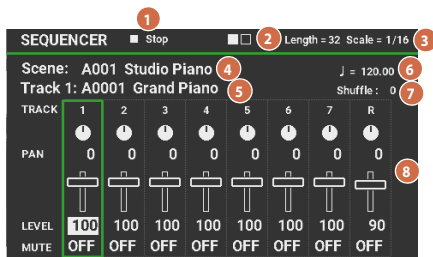

No.	Explanation	No.	Explanation
1	Status shown <ul style="list-style-type: none"> <li>• Now Recording</li> <li>• Now Playing</li> <li>• Rec Standby</li> <li>• Stop</li> </ul>	4	Scene
2	<b>Length</b> Number of steps (Value: 1–64; sixteen steps are shown at left as a single square.)	5	Tone
3	<b>Scale</b> Length of one step	6	Tempo
		7	Shuffle (swing)
		8	Mixer

#### 2. Move the cursor to the scene, and use the value dial to select the pattern to play back.

#### 3. Press the [▶/■] button to play back the pattern.

Press the button again to stop playback.

## MEMO

When the Step Length is 17 or greater, on the SEQUENCER screen, when you press the [1]–[4] buttons while holding down the [SHIFT] button, you can switch between the current step positions in units of 16 steps.

### Muting specific tracks (track mute)

Use this when a pattern is playing back and you want to mute a specific track or tracks.

- 1. While the [SEQUENCER] button is lit, press the [MUTE] button to make it light up.**  
The instrument enters pad mute setting mode.
- 2. Press pads [1]–[8] to select the tracks to mute.**  
The pads you press blink, and the corresponding tracks are muted. You can press more than one pad.
- 3. To unmute, press the pad once more that corresponds to the track you muted.**
- 4. To exit the track mute settings, press the [MUTE] button.**  
The pads go dark.

## Step sequencer: basic operations

Controller	Explanation
[▶/■] button	Plays/stops the step sequencer.
[●] (STEP) button	Creates a pattern by recording your keyboard performance and controller operations (such as knob motions). If you press this button while holding down the [SHIFT] button, the STEP EDIT screen appears. You can edit the steps and record in STEP REC/TR-REC mode.
[MUTE] button	When you turn this on while the [SEQUENCER] button is lit, you can mute the tracks specified by pads [1]–[8].
[ERASE] button	Erases all or part of a recorded track.
Pads [1]–[8]	Selects the track (part). You can use the keyboard to play or record the selected part.
[TEMPO] button	Changes the tempo.

# Playing back the rhythm patterns


A rhythm pattern is a phrase that's played with rhythm instruments such as drums or percussion. With this instrument, you can play the keyboard along with the rhythm patterns that are assigned to pads [1]–[8].

Each rhythm pattern has eight variations, and these eight variations make up a single “rhythm pattern group”.

When you select a rhythm pattern group, the variations are automatically assigned to pads [1]–[8].

Also, the drum tone that plays in a rhythm pattern is called a “drum kit”.


The drum kit selected in part R of the currently selected scene is used for the rhythm pattern.

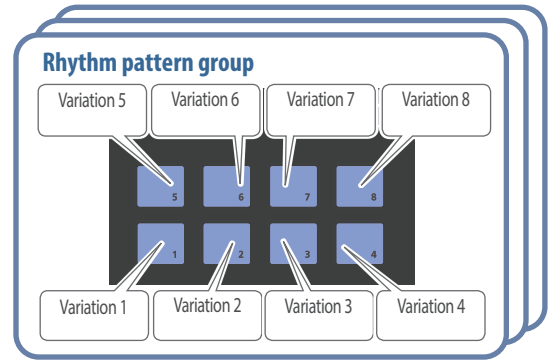

## Selecting and playing back a rhythm pattern

### 1. Press the [RHYTHM] button to make it light.

The RHYTHM PATTERN screen appears.

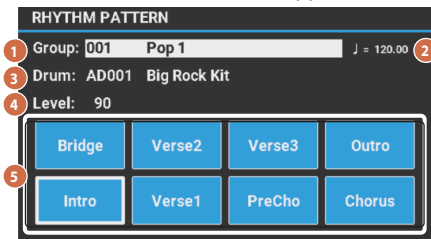

No.	Explanation	No.	Explanation
1	Rhythm pattern group	4	Rhythm pattern volume
2	Tempo	5	Rhythm pattern variation
3	Drum kit		

### 2. Make the settings for the rhythm pattern.

Parameter	Value/Explanation
Group	<p>Selects the rhythm pattern group. When you change the rhythm pattern group, the rhythm pattern that's assigned to pads [1]–[8] also changes.</p> <p>➔ For more on the rhythm pattern groups, refer to the “Parameter Guide” (Roland website).</p>
Drum	<p>Selects the drum kit used to play the rhythm pattern.</p> <p>➔ For a list of drum kits, refer to the “Sound list” (Roland website).</p> <p>Although the drum kit that's specified by the rhythm pattern group changes when you change the rhythm pattern group, you can select a different drum kit with this parameter.</p>
Level	<p>0–127</p> <p>Sets the rhythm pattern's volume.</p> <p><b>MEMO</b></p> <p>You can also use the [PHRASE PAD] slider to adjust the volume of the rhythm pattern.</p>

#### MEMO

The rhythm pattern group settings can be saved in a scene. For details on how to save the settings, refer to the “Reference Manual” (Roland website).

### 3. Press the pad [1]–[8] buttons to play back the rhythm pattern.

The rhythm pattern plays that's assigned to the pad you pressed, and the pad blinks. Press the respective pad again to stop playback (the pad lights up).

## Changing the tempo

### 1. Press the [TEMPO] button.

The TEMPO screen appears.



### 2. Use the value dial to adjust the tempo.

### 3. Press the [EXIT] button to return to the previous screen.

#### MEMO

- You can specify the tempo by pressing the [TEMPO] button at the desired timing (tap tempo). Press the [TEMPO] buttons three times or more at quarter-note intervals of the desired tempo.
- When you switch scenes, this setting specifies whether to use the system tempo (SYSTEM) or the tempo stored in the scene (SCENE). For details, refer to the “Parameter Guide” (Roland website).

# Playing back audio files (audio player)

You can assign audio files saved on a USB flash drive to the pads [1]–[8] for playback.

## Audio files that can be played (WAV/AIFF)

Sample rate	44.1, 48 kHz
Bit rate	8, 16 or 24 bits


### NOTE

- You can't play back two or more audio files at the same time.

## Assigning audio files to pads for playback

- Format the USB flash drive on the XPS-60 (p. 16).
- Turn off the XPS-60 and then unplug the USB flash drive.
- On your computer, create a new subfolder inside the "SONG LIST" folder.

\* Use single-byte alphanumeric characters for the folder name.

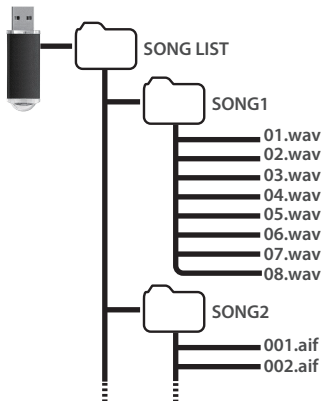

- Copy the audio files you want to play into the subfolder you've created.
- Insert the USB flash drive into this instrument, and turn on the power.
- Press the [AUDIO] button.

The AUDIO PLAYER screen appears.

AUDIO PLAYER	
Song List :	SONG1
Audio Level:	50
Pitch Link:	OFF
Speed Link:	OFF
PAD1   PAD2   PAD3   PAD4   PAD5   PAD6   PAD7   PAD8   1 / 8	
Name	01.wav
Loop Switch	OFF
Loop Start Point	00000000
Loop End Point	00657407
Pitch	0
Speed	100%

- Configure the audio player settings.


Parameter	Value/Explanation
Song List	Shows the subfolders inside the SONG LIST folder on the USB flash drive.

Parameter	Value/Explanation
Audio Level	Sets the volume of the audio file. * The Audio Level value is reset when you turn off the power. If you want to store the value in memory so that it can be recalled after the power is turned off and on again, save the system settings. For details, refer to the "Reference Manual" (Roland website).
	0–127
Pitch Link	When this is ON, if you change the Pitch setting of one pad, the Pitch setting of the other pads changes to the same value.
	OFF (default), ON
Speed Link	When this is ON, if you change the Speed setting of one pad, the Speed setting of the other pads changes to the same value.
	OFF (default), ON
Pad 1–8	
Name	Shows the audio files assigned to the pads.
Loop Switch	Turns repeat playback on/off.
	OFF, ON
Loop Start Point	Sets the position at which loop playback starts.
	0– (setting range)
Loop End Point	Sets the position at which loop playback ends.
	(setting range)–end
Pitch	Sets the pitch.
	–12–0 (default value)–12
Speed	Sets the playback speed.
	50%–100% (default value)–150%

\* Never turn off the power or disconnect the USB flash drive if you have edited the settings.

- To edit the song list, press the [ENTER] button.

The audio files in the selected folder are assigned to the pads, in order from the top. For example, if you select the SONG1 folder, the files are assigned as shown in the illustration below.

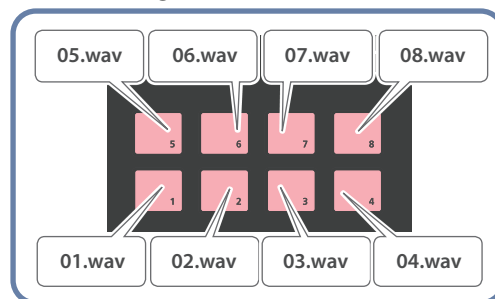

### MEMO

The files in the folders are shown in numeric and alphabetical order, and eight files are assigned in order from the top.

- Press the pads [1]–[8].

The pads you press blink, and the audio files that are assigned to each pad play back.

Press the respective pad again to stop playback (the pad lights up).

# Adding more tones to the XPS-60 (EXPANSION)

You can install World Expansion and other tone files that you've downloaded on the XPS-60, and add them as expansion tones. Sound files are available via Roland Cloud. See the "Roland Cloud User's Guide" (Roland website) for details on how to get tone files.

\* Please be aware that in some countries or regions, it might not be possible to use Roland Cloud at this time.

## Using Roland Cloud Manager

Use Roland Cloud Manager to download the tone files from Roland Cloud to your computer.

Next, use a USB flash drive to import the tone files that you downloaded to your computer into the XPS-60.


- Click [here](#) for more information on Roland Cloud.
- Click [here](#) to download Roland Cloud Manager.
- Click [here](#) to download the Roland Cloud Manager Owner's Manual.
- Click [here](#) for the latest support information on Roland Cloud.

## Installing a World Expansion

\* If this is the first time you're using the USB flash drive, format it on the XPS-60 (p. 16).

1. **Save the tone data you downloaded (EXZ files) to the root directory (the topmost level) of your USB flash drive.**
2. **Insert the USB flash drive into this instrument.**
3. **On the UTILITY screen, move the cursor to "EXPANSION" and press the [ENTER] button.**


The EXPANSION screen appears.

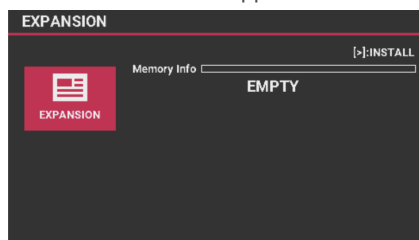

### MEMO

- The World Expansions you've installed are shown on this screen.
- You can also access the EXPANSION screen by holding down the [ENTER] button and turning the power on.

4. **Press the [▶] (INSTALL) button.**  
The tone data saved on the USB flash drive is shown.
5. **Select the tone data you want to install with the [▼] [▲] buttons.**

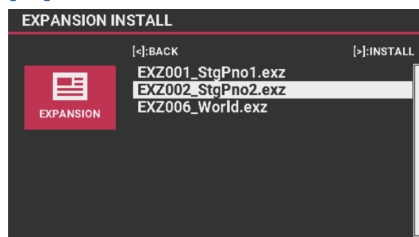

6. **Press the [▶] (INSTALL) button.**

The message "Install License? Are you sure?" is shown. If you decide to cancel, press the [EXIT] button.

- \* When you select a file that's not supported by this instrument or is corrupted, the message "Incorrect File!" appears and the file can't be installed.

7. **Move the cursor to "OK" and press the [ENTER] button.**

The message "Expansion install Are you sure?" is shown. If you decide to cancel, press the [EXIT] button.

8. **Move the cursor to "OK" and press the [ENTER] button.**

Once installation is finished, the EXPANSION screen is shown. To install more tone data, repeat steps 4–8.

### NOTE

Never turn off the power or remove the USB flash drives while the screen indicates "Processing...".

9. **Turn the power back on once the tone data has been installed.**

## Selecting tones you've added

1. **On the top screen, move the cursor to the tone name of the part you want to change, and press the [EXP] button.**
2. **Use the value dial to select a tone.**

### MEMO

You can also press the [ENTER] button to select from the TONE LIST screen.

## Uninstalling a World Expansion

If there isn't enough memory available, you can uninstall a World Expansion that's already been installed to make room for new World Expansions.


1. **On the UTILITY screen, move the cursor to "EXPANSION" and press the [ENTER] button.**  
The EXPANSION screen appears.
2. **Use the [▼] [▲] buttons to select the file to uninstall, and press the [◀] (UNINSTALL) button.**  
A confirmation message appears. If you decide to cancel, press the [EXIT] button.
3. **Move the cursor to "OK" and press the [ENTER] button.**

# Importing and playing samples

You can assign audio files (“samples”) that are imported into this instrument from a USB flash drive, to play on the keyboard.

## NOTE

Audio files that can be imported must be in WAV format, 44.1/48 kHz, 16/24-bit. If you select a file that doesn’t meet these requirements, “Import Error!” is shown, and the file cannot be imported.

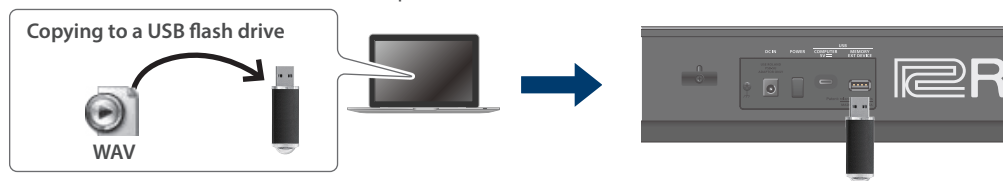

## Importing audio files (samples)

When you import a sample into a user sample, a user tone that uses that user sample is created at the same time.

### 1. Format the USB flash drive on the XPS-60 (p. 16).

### 2. Turn off the XPS-60 and then unplug the USB flash drive.

### 3. On your computer, copy the audio file you want to import into the IMPORT folder.

\* Use single-byte alphanumeric characters for the file and folder names.

### 4. Insert the USB flash drive into this instrument, and turn on the power.

### 5. Press the [MENU] button.


The MENU screen appears.

### 6. Move the cursor to “SAMPLE” and press the [ENTER] button.

The SAMPLE menu screen appears.

### 7. Move the cursor to “IMPORT” and press the [ENTER] button.

The IMPORT screen appears.

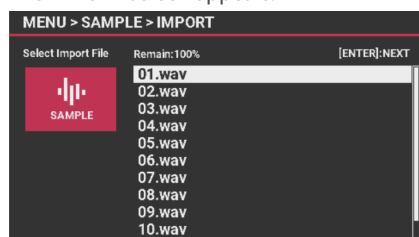

### 8. Select the file to import.

## MEMO

- The sample is automatically applied as a scale on the keyboard, from three octaves above the pitch that was originally sampled (original key) when the sample was imported, and all the way down to the lowest key.
- You can change the sample’s loop point and the original key later. For details, refer to the “Parameter Guide” (Roland website).

### 9. Move the cursor to the user tone where you want to import the data, and press the [ENTER] button.

### 10. Move the cursor to “OK” and press the [ENTER] button.

This imports the audio file.

- \* The display shows “Import Sample Completed!” when importing is done.
- \* If the user memory is full, the message “Import Error!” appears, and the data cannot be imported. If this happens, delete any unneeded samples.

### 11. Repeat steps 5–10 to import the necessary audio files.

## MEMO

- The samples that are created can be selected as a single user tone from the tone list in the SAMPLE category or from the tone list in the user bank.
- Samples with large file sizes may take several minutes to import.

## NOTE

Never turn off the power or remove the USB flash drives while the screen indicates “Processing...”.

## Recalling a sample

### 1. On the top screen, move the cursor to the tone and press the [15] (SAMPLE) button or the [16] USER button.


### 2. Use the value dial to select a tone.

- \* The pitches of notes that are more than three octaves above the original key that was set do not change.

# Operating the menu

## 1. Press the [MENU] button.

The MENU screen appears.

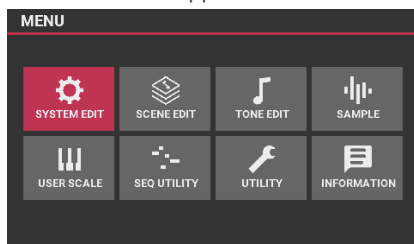

Menu	Explanation
SYSTEM EDIT	Configures the global settings for the XPS-60.
SCENE EDIT	Shows the selection screen for the scene edit-related parameters.
TONE EDIT/ DRUM EDIT	Shows the selection screen for the tone or drum edit-related parameters.
SAMPLE	Shows the selection screen for the sample import-related parameters.
USER SCALE	Configures the settings for the User Scale function.
SEQ UTILITY	Shows the sequencer utility menu.
UTILITY	Shows the menu for the various utilities.
INFORMATION	Shows the version information for this instrument.

## 2. Move the cursor to the parameter you want to set and press the [ENTER] button.

\* If you see another menu, repeat step 2.

## 3. On screens with more than one tab, switch between the tabs with the [◀] [▶] buttons.

## 4. Move the cursor to select the parameter that you want to edit, and use the value dial to edit the value.

## 5. When you're finished with the settings, press the [WRITE] button to save the settings.

### MEMO

Refer to the "Reference Manual" (Roland website) for details on how to save the settings.

## Changing the auto off setting

\* The power to this unit turns off automatically to save energy after a certain amount of time (20 minutes by default) has passed since it was last used or since its buttons or controls were operated.

\* Note that when the setting is turned off, the unit may consume more power.

### NOTE

If the power automatically turns off, any unsaved data is lost. Before the power turns off, save the data that you want to keep.

## 1. On the SYSTEM EDIT screen, move the cursor to "COMMON" and press the [ENTER] button.

## 2. Move the cursor to "Auto Off" in the "COMMON" tab page, and use the value dial to change the value.

\* A confirmation message appears if you select "OFF" or "240min". To confirm, move the cursor to "OK" and press the [ENTER] button.

Parameter	Value	Explanation
Auto Off	OFF	The power will not turn off automatically.
	20min	The power will automatically turn off if no operation is performed for 20 minutes.
	240min	The power will automatically turn off if no operation is performed for 240 minutes (four hours).

## 3. While the SYSTEM EDIT screen is shown, press the [WRITE] button.

## 4. Move the cursor to "WRITE" and press the [ENTER] button.

Once the settings are changed, the message "Completed" appears.

### NOTE

Never turn off the power or remove the USB flash drives while the screen indicates "Now Writing...".

## Formatting a USB flash drive (FORMAT USB MEMORY)

### NOTE

- When you format a USB flash drive, all data on that USB flash drive is lost.
- Never turn off the power or remove the USB flash drives while the screen indicates "Processing...".

## 1. Plug a USB flash drive into the instrument.

## 2. On the UTILITY screen, move the cursor to "FORMAT USB MEMORY" and press the [ENTER] button.


A confirmation message appears.

If you decide to cancel, press the [EXIT] button.

## 3. Move the cursor to "OK" and press the [ENTER] button.

When formatting is complete, the message "Completed" appears.

## USB flash drive folder architecture

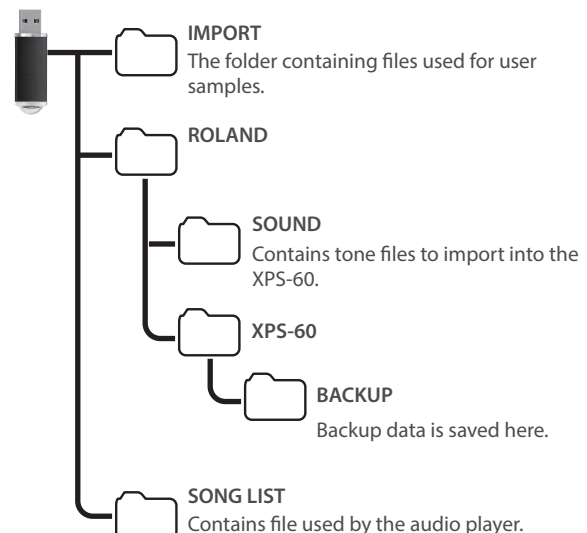

## Import/export

### Importing tones

You can import tones that you've exported from another XPS-60 into this instrument as additional tones.


#### Saving tones to a USB flash drive

\* If this is the first time you're using the USB flash drive, format it on the XPS-60 (p. 16).


1. Prepare a SVZ file with the tones you've exported using the export function on another XPS-60, which you'll import into this instrument.
2. Connect a USB flash drive to your computer.
3. Save the SVZ file to the "ROLAND/SOUND" folder on your USB flash drive.
4. Remove the USB flash drive from your computer and connect it to this instrument.

#### Importing tones into the XPS-60

1. On the UTILITY screen, move the cursor to "IMPORT TONE" and press the [ENTER] button.
2. Move the cursor to the SVZ file you want to import, and press the [ENTER] button.

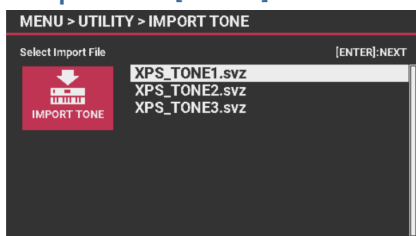

3. Make sure that the tone names you want to import are selected with a check mark, and press the [ENTER] button.

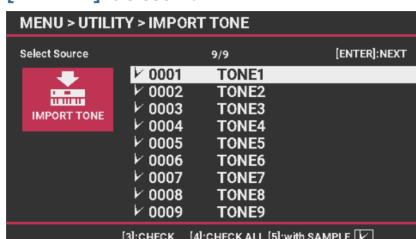

Button	Explanation
[3] CHECK or [INC] [DEC]	Selects or deselects the check marks for individual tones.
[4] CHECK ALL	Selects or deselects the check marks for all tones.

Button	Explanation
[5] with SAMPLE	For tones that contain user samples, this imports, selects or deselects the check marks, including the samples. * Samples included in user tones are stored in the user sample area. When the user sample area is full, the message "Import Error!" is shown, and the data can't be imported. In this case, delete unnecessary user samples to free up space so that the data can be imported.

4. Select the numbers of the tones you want to import with a check mark, and press the [ENTER] button.

Button	Explanation
[3] CHECK or [INC] [DEC]	Selects or deselects the check marks for individual user tones in the save destination.
[4] CHECK ALL	Selects or deselects the check marks for all save destinations.

A confirmation message appears.

If you decide to cancel, press the [EXIT] button.

#### NOTE

The selected user tones in the import destination are overwritten.

5. Move the cursor to "OK" and press the [ENTER] button.

The display shows "Import Tone Completed!" when importing is done.

### Importing scenes

You can import scenes as additional scenes into this instrument that were exported from another XPS-60.

\* You can also import scenes from a backup file.


#### Saving scenes to a USB flash drive

\* If this is the first time you're using the USB flash drive, format it on the XPS-60.


1. Prepare a SVD file with the scenes you've exported using the export function on another XPS-60, which you'll import into this instrument.
2. Connect a USB flash drive to your computer.
3. Save the SVD file to the "ROLAND/SOUND" folder on your USB flash drive.
4. Remove the USB flash drive from your computer and connect it to this instrument.

## Importing scenes into the XPS-60

1. On the UTILITY screen, move the cursor to “IMPORT SCENE” and press the [ENTER] button.
2. Move the cursor to the SVD file you want to import, and press the [ENTER] button.

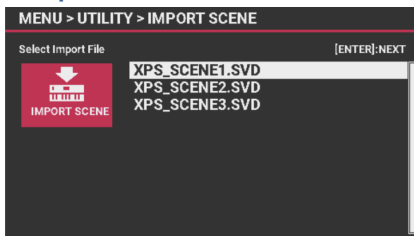

3. Make sure that the scene names you want to import are selected with a check mark, and press the [ENTER] button.

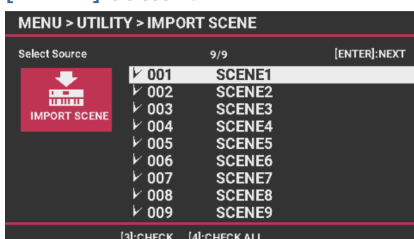

### MEMO

Button	Explanation
[3] CHECK or [INC] [DEC]	Selects or deselects the check marks for individual scenes.
[4] CHECK ALL	Selects or deselects the check marks for all scenes.

4. Select the numbers of the scenes you want to import with a check mark, and press the [ENTER] button.

Button	Explanation
[3] CHECK or [INC] [DEC]	Selects or deselects the check marks for individual user scenes in the save destination.
[4] CHECK ALL	Selects or deselects the check marks for all save destinations.

A confirmation message appears.

If you decide to cancel, press the [EXIT] button.

### NOTE

The selected scenes in the import destination are overwritten.

5. Move the cursor to “OK” and press the [ENTER] button.

The display shows “Import Scene Completed!” when importing is done.

### MEMO

If the following data is being used by the scene of the import destination, you can select whether to import that data as well.

- User tone
- User drums

## Exporting tones

You can export the user tone data to a SVZ file.

1. Connect a USB flash drive.
2. On the UTILITY screen, move the cursor to “EXPORT TONE” and press the [ENTER] button.
3. Make sure that the tone names you want to export are selected with a check mark, and press the [ENTER] button.



### MEMO

Button	Explanation
[3] CHECK or [INC] [DEC]	Selects or deselects the check marks for individual tones.
[4] CHECK ALL	Selects or deselects the check marks for all tones.
[5] with SAMPLE	For tones that contain user samples, this exports, selects or deselects the check marks, including the samples.

4. Input the name of the SVZ file to export, and press the [ENTER] button.

A confirmation message appears.

If you decide to cancel, press the [EXIT] button.

5. Move the cursor to “OK” and press the [ENTER] button.

The display shows “Export Tone Completed!” when exporting is done.

## Exporting scenes

You can export the scene data to a SVD file.

1. Connect a USB flash drive to this instrument.
2. On the UTILITY screen, move the cursor to “EXPORT SCENE” and press the [ENTER] button.

3. Make sure that the scene names you want to export are selected with a check mark, and press the [ENTER] button.



**MEMO**

Button	Explanation
[3] CHECK or [INC] [DEC]	Selects or deselects the check marks for individual scenes.
[4] CHECK ALL	Selects or deselects the check marks for all scenes.

4. Input the name of the SVD file to export, and press the [ENTER] button.

A confirmation message appears.  
If you decide to cancel, press the [EXIT] button.

5. Move the cursor to "OK" and press the [ENTER] button.

The display shows "Export Scene Completed!" when exporting is done.

## Returning to the factory settings (FACTORY RESET)

Here's how you can restore all the user settings and data stored in this instrument to their factory settings (factory reset).


**NOTE**

- A factory reset erases the data in question that's been modified since you purchased this instrument.  
To save the current settings, be sure to use the backup function before restoring the unit to its factory settings. For details on how to back up the data in this instrument, refer to the "Reference Manual" (Roland website).
- Never turn off the power or remove the USB flash drives while the screen indicates "Processing..."


1. On the UTILITY screen, move the cursor to "FACTORY RESET" and press the [ENTER] button.

The FACTORY RESET screen appears.

**If a World Expansion is imported/installed**

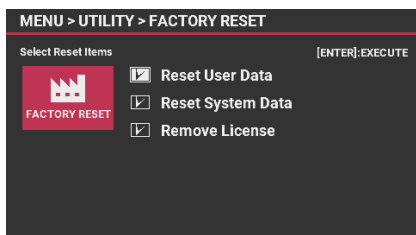

**If a World Expansion is not imported/installed**

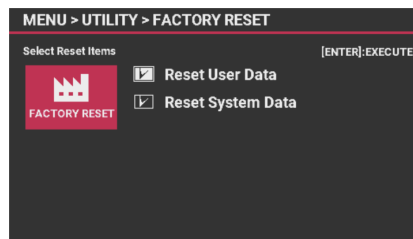

2. Select the item to execute, and turn the value dial to select its check box.

Turn the value dial a second time to remove the check mark.


Item	Explanation
Reset User Data	Initializes the user scenes, user tones and user drum kits.
Reset System Data	Initializes the system settings.
Remove License (*1)	Initializes the user license and World Expansion. Initializing the user license lets you import/install a World Expansion that was downloaded with a different user license. * This deletes the currently installed World Expansion. * This does not delete the pre-installed EXZ101. To remove the EXZ101, see "Uninstalling a World Expansion" (p. 14).

\*1 This is displayed if a World Expansion is imported/installed. See the "Roland Cloud User's Guide" (Roland website) for details on how to initialize a user license.

3. Press the [ENTER] button.  
A confirmation message appears.  
If you decide to cancel, press the [EXIT] button.
4. Move the cursor to "OK" and press the [ENTER] button.  
When the factory reset is completed, the screen indicates "Completed. Turn off the power."
5. Turn the power of the XPS-60 off and then on again.

## INFORMATION

Displays the version of the instrument's system program.

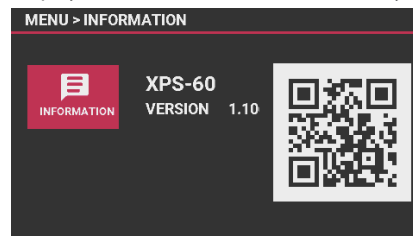

\* See the Roland website for information on updating the system program.

<https://www.roland.com/support/>

Input the model name → refer to "Updates & Drivers"

# Troubleshooting



If this instrument is not working as expected, first check the following points. If you've checked these points and still can't find the cause, contact Roland Support or the dealer where you purchased your instrument.

Problem	Items to check/Action
<b>Power does not turn on</b>	Check that the AC adaptor is properly connected to a power outlet and to this instrument (p. 5).
<b>No sound</b>	The [MASTER VOLUME] knob might have been turned down.
	Is this instrument properly connected to other devices (p. 5)?
	Is the power of the connected amplified speaker(s) turned on?
	The volume on the connected devices might have been turned down.
	If you don't hear sound from the connected amplified speakers or mixer, try connecting headphones to this instrument and checking the sound. If you hear sound through the headphones, there may be a short in the cable connected to the amplified speaker, or the amp or mixer may be malfunctioning. Check the connecting cables and devices again.
	The level of the sound (tone) may be too low. Check the level setting. For details, refer to the "Parameter Guide" (Roland website).
	The partial of the tone might be turned off. Turn the partial switch on. For details, refer to the "Parameter Guide" (Roland website).
	The part might be muted. Turn the mute switch off (p. 11). For details, refer to the "Reference Manual" (Roland website).
	Check the effect on/off settings.
	The keyboard switch might be turned off. Turn the keyboard switch on. For details, refer to the "Reference Manual" (Roland website).
<b>Can't hear certain parts</b>	If you play a key but don't hear a sound, the local switch may be turned off. Set Local Switch to "ON" (MENU > SYSTEM EDIT > COMMON screen in the COMMON tab page).
	You might have turned the volume down by operating the pedal, or the volume may have been lowered if the instrument received a MIDI message (a volume or expression message) from your computer.
<b>SOUND MODIFY knobs have no effect on certain tones</b>	The [UPPER] slider (part 1) and [LOWER] slider (part 2) might be lowered (p. 2).
	The part volume might have been lowered. Check the part levels. For details, refer to the "Reference Manual" (Roland website).
<b>Sounds in the high frequency range of acoustic piano tones change suddenly</b>	On acoustic piano tones, the CUTOFF and RESONANCE SOUND MODIFY knobs have no effect. This is by design, and is not a malfunction.
<b>Sounds in the high frequency range of acoustic piano tones change suddenly</b>	On acoustic piano tones, the higher notes of the piano (from the highest key down around 1½ octaves) fully sustain after you play them, even if the damper pedal is not pressed. Also, the sound changes where there is a change in the number of strings per key, or if there is a transition from wound strings to unwound strings. This is because the acoustic piano tones faithfully reproduce the characteristics of an acoustic piano, and it not a malfunction.
<b>The note you play keeps playing after you play and release the key</b>	If you've connected a pedal, the pedal polarity might be reversed. Check the Control Pedal Polarity and Hold Pedal Polarity settings in the PEDAL tab page, MENU > SYSTEM EDIT > COMMON screen.
<b>No sound from mic</b>	Check the levels of the MIC [GAIN] knob on the rear panel and the [MIC] slider on the top panel.
	The Mic Input Level might have been set to "0". Check the Mic Input Level setting in the MIC INPUT tab page, MENU > SYSTEM EDIT > EFFECTS screen.
	A condenser mic might be connected. Condenser microphones cannot be used with the XPS-60.




# USING THE UNIT SAFELY

## INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

### About ⚠️ WARNING and ⚠️ CAUTION Notices

 <b>WARNING</b>	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
 <b>CANTION</b>	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

### About the Symbols

	The ⚠️ symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
	The ⚡ symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
	The ⚙️ symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

## ALWAYS OBSERVE THE FOLLOWING

### WARNING

#### Use only the stand that is recommended

This unit should be used only with a stand that is recommended by Roland.



#### Do not place in a location that is unstable

When using the unit with a stand recommended by Roland, the stand must be carefully placed so it is level and sure to remain stable. If not using a stand, you still need to make sure that any location you choose for placing the unit provides a level surface that will properly support the unit, and keep it from wobbling.



#### Precautions regarding placement of this unit on a stand

Be sure to follow the instructions in the Owner's Manual carefully when placing this unit on a stand (\*1).



If it is not set up properly, you risk creating an unstable situation which could lead to the unit falling or the stand toppling, and may result in injury.

#### Use only the supplied AC adaptor and the correct voltage

Be sure to use only the AC adaptor supplied with the unit. Also, make sure the line voltage at the installation matches the input voltage specified on the AC adaptor's body. Other AC adaptors may use a different polarity, or be designed for a different voltage, so their use could result in damage, malfunction, or electric shock.



#### Use only the supplied power cord

Use only the attached power cord. Also, the supplied power cord must not be used with any other device.



### WARNING

#### Use only the specified stand(s)

This unit is designed to be used in combination with specific stands (\*2) manufactured by Roland. If used in combination with other stands, you risk sustaining injuries as the result of this product dropping down or toppling over due to a lack of stability.



#### Evaluate safety issues before using stands

Even if you observe the cautions given in the owner's manual, certain types of handling may allow this product to fall from the stand, or cause the stand to overturn. Please be mindful of any safety issues before using this product.



\*1 For details on how to place this unit on a stand, refer to the "Reference Manual" (Roland website).

\*2 KS-11Z, KS-13, KS-20X

### CAUTION

#### Handle the ground terminal carefully

If you remove the screw from the ground terminal, be sure to replace it; don't leave it lying around where it could accidentally be swallowed by small children. When refastening the screw, make that it is firmly fastened, so it won't come loose.



# IMPORTANT NOTES

## Power Supply

- Place the AC adaptor so that the side with text is downward.

## Placement

- Do not allow objects to remain on top of the keyboard. This can be the cause of malfunction, such as keys ceasing to produce sound.
- Depending on the material and temperature of the surface on which you place the unit, its rubber feet may discolor or mar the surface.

## Repairs and Data

- Before sending the unit away for repairs, be sure to make a backup of the data stored within it; or you may prefer to write down the needed information. Although we will do our utmost to preserve the data stored in your unit when we carry out repairs, in some cases, such as when the memory section is physically damaged, restoration of the stored content may be impossible. Roland assumes no liability concerning the restoration of any stored content that has been lost.

## Additional Precautions

- Any data stored within the unit can be lost as the result of equipment failure, incorrect operation, etc. To protect yourself against the irretrievable loss of data, be sure to make a backup of the data stored within it; or you may prefer to write down the needed information.
- Roland assumes no liability concerning the restoration of any stored content that has been lost.
- Never strike or apply strong pressure to the display.
- The sound of keys being struck and vibrations produced by playing an instrument can be transmitted through a floor or wall to an unexpected extent. Please take care not to cause annoyance to others nearby.
- Do not use connection cables that contain a built-in resistor.

## Using External Memories

- Please observe the following precautions when handling external memory devices. Also, make sure to carefully observe all the precautions that were supplied with the external memory device.
  - Do not remove the device while reading/writing is in progress.
  - To prevent damage from static electricity, discharge all static electricity from your person before handling the device.

## Intellectual Property Right

- It is forbidden by law to make an audio recording, video recording, copy or revision of a third party's copyrighted work (musical work, video work, broadcast, live performance, or other work), whether in whole or in part, and distribute, sell, lease, perform or broadcast it without the permission of the copyright owner.
- Do not use this product for purposes that could infringe on a copyright held by a third party. We assume no responsibility whatsoever with regard to any infringements of third-party copyrights arising through your use of this product.
- The copyright of content in this product (the sound waveform data, style data, accompaniment patterns, phrase data, audio loops and image data) is reserved by Roland Corporation.
- Purchasers of this product are permitted to utilize said content (except song data such as Demo Songs) for the creating, performing, recording and distributing original musical works.
- Purchasers of this product are NOT permitted to extract said content in original or modified form, for the purpose of distributing recorded medium of said content or making them available on a computer network.
- ASIO is a trademark and software of Steinberg Media Technologies GmbH.
- This product contains eParts integrated software platform of eSOL Co., Ltd. eParts is a trademark of eSOL Co., Ltd. in Japan.
- This Product uses the Source Code of  $\mu$ T-Kernel under T-License 2.0 granted by the T-Engine Forum ([www.tron.org](http://www.tron.org)).
- This product includes third party open source software.

Copyright © 2009-2018 ARM Limited. All rights reserved.

Copyright © 2018 STMicroelectronics. All rights reserved.

Licensed under the Apache License, Version 2.0 (the "License");  
You may obtain a copy of the License at <http://www.apache.org/licenses/LICENSE-2.0>

Copyright © 2018 STMicroelectronics. All rights reserved.

This software component is licensed by ST under BSD 3 Clause license, the "License";  
You may obtain a copy of the License at <https://opensource.org/licenses/BSD-3-Clause>

- Copyright (c) 2024 , Roland Corporation (<https://www.roland.com>) with Reserved Font Name <Roboto>  
This Font Software is licensed under the SIL Open Font License, Version 1.1. This license is copied below, and is also available with a FAQ at: <http://scripts.sil.org/OFL>

-----  
SIL OPEN FONT LICENSE Version 1.1 - 26 February 2007  
-----

## PREAMBLE

The goals of the Open Font License (OFL) are to stimulate worldwide development of collaborative font projects, to support the font creation efforts of academic and linguistic communities, and to provide a free and open framework in which fonts may be shared and improved in partnership with others.

The OFL allows the licensed fonts to be used, studied, modified and redistributed freely as long as they are not sold by themselves. The fonts, including any derivative works, can be bundled, embedded, redistributed and/or sold with any software provided that any reserved names are not used by derivative works. The fonts and derivatives, however, cannot be released under any other type of license. The requirement for fonts to remain under this license does not apply to any document created using the fonts or their derivatives.

## DEFINITIONS

"Font Software" refers to the set of files released by Copyright Holder(s) under this license and clearly marked as such. This may include source files, build scripts and documentation.

"Reserved Font Name" refers to any names specified as such after the copyright statement(s).

"Original Version" refers to the collection of Font Software components as distributed by the Copyright Holder(s).

"Modified Version" refers to any derivative made by adding to, deleting, or substituting -- in part or in whole -- any of the components of the Original Version, by changing formats or porting the Font Software to a new environment.

"Author" refers to any designer, engineer, programmer, technical writer or other person who contributed to the Font Software.

**PERMISSION & CONDITIONS**

Permission is hereby granted, free of charge, to any person obtaining a copy of the Font Software, to use, study, copy, merge, embed, modify, redistribute, and sell modified and unmodified copies of the Font Software, subject to the following conditions:

- 1) Neither the Font Software nor any of its individual components, in Original or Modified Versions, may be sold by itself.
- 2) Original or Modified Versions of the Font Software may be bundled, redistributed and/or sold with any software, provided that each copy contains the above copyright notice and this license. These can be included either as stand-alone text files, human-readable headers or in the appropriate machine-readable metadata fields within text or binary files as long as those fields can be easily viewed by the user.
- 3) No Modified Version of the Font Software may use the Reserved Font Name(s) unless explicit written permission is granted by the corresponding Copyright Holder. This restriction only applies to the primary font name as presented to the users.
- 4) The name(s) of the Copyright Holder(s) or the Author(s) of the Font Software shall not be used to promote, endorse or advertise any Modified Version, except to acknowledge the contribution(s) of the Copyright Holder(s) and the Author(s) or with their explicit written permission.
- 5) The Font Software, modified or unmodified, in part or in whole, must be distributed entirely under this license, and must not be distributed under any other license. The requirement for fonts to remain under this license does not apply to any document created using the Font Software.

**TERMINATION**

This license becomes null and void if any of the above conditions are not met.

**DISCLAIMER**

THE FONT SOFTWARE IS PROVIDED "AS IS"; WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF COPYRIGHT, PATENT, TRADEMARK, OR OTHER RIGHT. IN NO EVENT SHALL THE COPYRIGHT HOLDER BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, INCLUDING ANY GENERAL, SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF THE USE OR INABILITY TO USE THE FONT SOFTWARE OR FROM OTHER DEALINGS IN THE FONT SOFTWARE.

- Roland is either registered trademarks or trademarks of Roland Corporation in the United States and/or other countries.
- Company names and product names appearing in this document are registered trademarks or trademarks of their respective owners.

# Main specifications

<b>Keyboard</b>	61 keys (with velocity)
<b>Power supply</b>	AC Adaptor, USB bus power supply (USB Type-C® port) * External power supply from a USB Type-A port isn't available. * Power consumption when in off mode (when the power automatically turns off): 0.2 W
<b>Current draw</b>	700 mA (AC adaptor), 2,000 mA (USB bus power supply)
<b>Dimensions</b>	1,005 (W) x 324 (D) x 94 (H) mm 39-5/8 (W) x 12-13/16 (D) x 3-3/4 (H) inches
<b>Weight</b>	5.8 kg 12 lbs 13 oz
<b>Accessories</b>	Startup Guide, Leaflet "USING THE UNIT SAFELY", AC adaptor, Power cord
<b>Options (sold separately)</b>	Keyboard Stand: KS-11Z, KS-13, KS-20X Pedal Switch: DP series, Expression Pedal: EV-5

\* This document explains the specifications of the product at the time that the document was issued. For the latest information, refer to the Roland website.